



**PROOUCT**  
**MANUAL**

## ▶ ILLUSTRATION OF MODEL

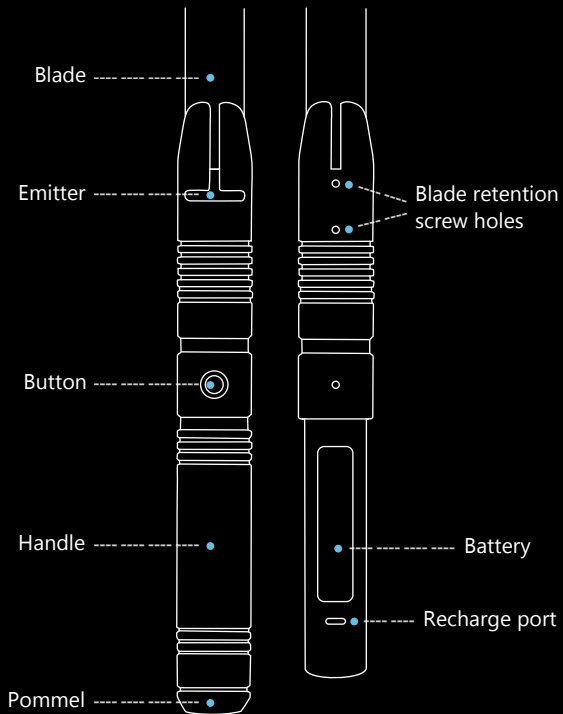

 
## ▶ DISMANTLING


- ① Rotate and unscrew the lightsaber body

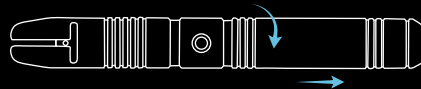

 
- ② Unscrew the back screws of the handle



 - ③ Push the switch button from the handle surface into the infrastructure




- ④ Pull down the inner structure

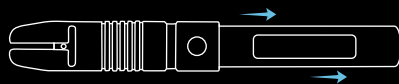 


## ▶ CHARGING DIAGRAM

 - ① For models with an external charging port, please use the charging cable provided by the merchant to plug in and charge.



- ② For models with built-in charging port, please unscrew the saber pommel or handle, and then use the charging cable provided by the merchant to plug in and charge.

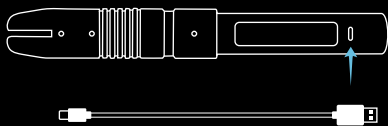

- ③ For models without a charging port, please unscrew the saber handle, then take out the battery and use the charging box provided by the merchant to charge.



## ▶ THREE SABERELECTRONICS VERSIONS

Type	RGB S16	S-RGB (upgrade model)	SN Pixel
Blade Length	82cm/92cm RGB Blade	82cm/92cm RGB Blade	82cm/92cm Pixel Blade
Blade Colors	12	12 (multi-color) Connecting With	12 (multi-color) Connecting With
Sound Fonts	16	27(Customizable)	27(Customizable)
Blade Style	Yes	Yes	Yes
Ignition Styles	Yes	Yes	Yes
Features	Flash on Clash / Gesture Ignition / Smooth swing / Lock-up Adjust colors / Removable battery and chassis		
Bluetooth	No	Yes	Yes
BGM	Yes	Yes	Yes
SD Card	Not Supported	32G	32G
Speaker	4 Ω 3W	4 Ω 3W	4 Ω 3W
Battery	2000mAh 18650	2000mAh 18650	3200mAh 18650

## ▶ OPERATING INSTRUCTIONS-RGBS16

### ① Single Button Control

Standby mode	Button Operation
Enter standby mode	Hold the button until the button light is on.
Enter boot status	Tap the button after enter standby mode.
Volume adjust	Hold the button until the breath light flashes once then release.
Switch sound fonts	Hold the button until the breath light flashes twice then release.
Switch BGM	Hold the button until the breath light flashes Three times then release.
FOC on/off	Hold the button until the breath light flashes Four times then release.
Motion control on/off	Hold the button until the breath light flashes Five times then release.
Power off	Hold the button until the breathing light is off.
Power saving mode	No operation for 10 minutes
Boot Status	
Blaster	Tap the button.
Lock-up	Hold the button until the breath light flashes once then release.
Switch blade color	Hold the button until the breath light flashes twice then release, and then tap button. Exit this mode need Hold the button until the breath light flashes once then release.
Switch blade effects	Hold the button until the breath light flashes Three times then release.
Enter standby mode	Hold the button until the breath light flashes Four times then release.
Standby mode	Gesture Operation
Enter boot status	Twist the saber after enter standby mode.
Switch sound fonts	Point blade upward, hold button and twist the hilt.
Switch BGM	Point blade downward, hold button and twist the hilt.
Boot Status	
Switch blade effects	Point blade upward, hold button and twist the hilt.
Switch blade color	Point blade downward, hold button and twist the hilt.

FOC	Hit the saber.
Enter standby mode	Twist the saber.

### ② PWR/AUX Control

When buttons are distributed up and down:  
Upper button is PWR button—lower button is AUX button.  
When the buttons are distributed left and right:  
left button is PWR button—right button is AUX button.

Standby mode	Button Operation
Enter standby mode	Hold the PWR until hearing the prompt sound "power on"
Enter boot status	Tap the PWR after enter standby mode.
Switch sound fonts	Tap the AUX.
Adjust volume	Hold the PWR then release.
Power saving mode	No operation for 10 minutes
Boot Status	
Blaster	Tap the AUX
Lock-up	Hold the AUX then release.
FOC off/on	Hold the PWR then release
Enter standby mode	Tap the PWR
Boot Status	Gesture Operation
Enter boot status	Twist the saber after enter standby mode.
Switch sound fonts	When the blade is up, Hold the AUX button then twist saber.
Switch BGM	When the blade is down, Hold the AUX button then twist saber.
Boot Status	
Switch blade effects	When the blade is up, Hold the AUX button then twist saber.
Switch blade color	When the blade is down, Hold the AUX button then twist saber.
FOC	Hit the saber.
Enter standby mode	Twist the saber.

## ▶ OPERATING INSTRUCTIONS-SRGB

### ① Single Button Control

Standby mode	Button Operation
Enter standby mode	Hold the button until the button light is on.
Enter boot status	Click the button after enter standby mode.
Volume adjust	Hold the button until the breath light flashes once then release.
Switch sound fonts	Hold the button until the breath light flashes twice then release.
Switch blade effects	Hold the button until the breath light flashes Three times then release.
Power off	Hold the button until the breath light flashes Five times then release.
Power saving mode	Hold the button until the breathing light is off. (No operation for 10 minutes)
Boot Status	
Blaster	Tap the button.
Lock-up	Hold the button until the breath light flashes once then release.
Switch blade color	Hold the button until the breath light flashes twice then release, then click the button to select color.
FOC off/on	Hold the button until the breath light flashes Three times then release.
Enter standby mode	Hold the button until the breath light flashes Four times then release.
Boot Status	
Gesture Operation	
Enter boot status	Twist the saber.
Switch sound fonts	Point blade upward, hold button and twist the hilt.
Switch BGM	Point blade downward, hold button and twist the hilt.
Boot Status	
Switch blade effects	Point blade upward, hold button and twist the hilt.
Switch blade color	Point blade downward, hold button and twist the hilt.
FOC	Hit the saber.
Enter standby mode	Twist the saber.

### ② PWR/AUX Control

When buttons are distributed up and down:  
Upper button is PWR button—lower button is AUX button.  
When the buttons are distributed left and right:  
left button is PWR button—right button is AUX button.

Standby mode	Button Operation
Enter standby mode	Hold the PWR until hearing the prompt sound "power on"
Enter boot status	Tap the PWR after enter standby mode.
Switch sound fonts	Tap the AUX.
Enter/Exit Volume adjust Mode	Hold the PWR and AUX at the same time until hear the beep then release it.
After Enter volume adjust Mode	Tap the PWR button to increase the volume. Tap the AUX button to decrease the volume.
switch blade effects	Press and hold the AUX button for 1 second and hear the beep and release it.
Power off	Click AUX button 3 times.
Power saving mode	No operation for 10 minutes.
Boot Status	
Blaster	Tap the AUX
Lock-up	Hold the AUX then release.
Enter standby mode	Tap the PWR
Standby mode	
Gesture Operation	
Enter boot status	Twist the saber.
Switch sound fonts	When the blade is up, Hold the AUX button then twist saber.
Switch BGM	When the blade is down, Hold the AUX button then twist saber.
Boot Status	
Switch blade color	When the blade is down, Hold the AUX button then twist saber .
FOC	Hit the saber.
Enter standby mode	Twist the saber.

## ▶ OPERATING INSTRUCTIONS — SNV4

### ① Single Button Control

Standby mode	Button Operation
Switch pixel number	Tap the button 3 times when power off .
Enter standby mode	Hold the button until the button light is on.
Enter boot status	Tap the button after enter standby mode.
Volume adjust	Hold the button until the breath light flashes once then release.
Switch boot effect	Hold the button until the breath light flashes twice then release.
Switch blade effect	Hold the button until the breath light flashes Three times then release.
Switch sound fonts	Hold the button until the breath light flashes Four times then release.
Power off	Hold the button until the breathing light is off.
Power saving mode	No operation for 10 minutes
Boot Status	
Blaster	Tap the button.
Lock-up	Hold the button until the breath light flashes once then release.
Switch blade color	Hold the button until the breath light flashes twice then release.
FOC on/off	Hold the button until the breath light flashes Three times then release.
Enter standby mode	Hold the button until the breath light flashes Four times then release.
Standby mode	Gesture Operation
Enter boot status	Twist the saber.
Switch sound fonts	Point blade upward, hold button and twist the hilt.
Switch BGM	Point blade downward, hold button and twist the hilt.

Boot Status	
Switch blade color	Point blade downward, hold button and twist the hilt.
Force	Point blade upward, hold button and twist the hilt.
FOC	Hit the saber.
Drag	Hold the button and hilt the blade.
Melt	Hold the button and thrust the blade forward.
Enter standby mode	Twist the saber.

### ② PWR/AUX Control

When buttons are distributed up and down:  
Upper button is PWR button—lower button is AUX button.  
When the buttons are distributed left and right:  
left button is PWR button—right button is AUX button.

Standby mode	Button Operation
Switch pixel number	Tap the PWR button 3 times when power off
Enter standby mode	Hold the PWR until hearing the prompt sound "power on"
Enter boot status	Tap the PWR after enter standby mode.
Switch sound fonts	Tap the AUX.
Enter/Exit Volume adjust Mode	Hold the PWR and AUX at the same time until hear the beep then release it.
After Enter volume adjust Mode	Tap the PWR button to increase the volume. Tap the AUX button to decrease the volume.
Switching boot effect	Hold the PWR button until hear the beep then release it.
Switch blade effect	Hold the AUX button until hear the beep then release it.
Power off	Tap the AUX button 3 times.
Power saving mode	No operation for 10 minutes.

Boot Status	Button Operation
Blaster	Tap the AUX
Lock-up	Hold the AUX then release.
FOC off/on	Hold the PWR and AUX buttons at the same time until hear the beep then release it.
Enter standby mode	Tap the PWR
Standby mode	Gesture Operation
Enter boot status	Twist the saber.
Switch sound fonts	Point blade upward, hold AUX button and twist the hilt
Switch BGM	Point blade downward, hold AUX button and twist the hilt
Boot Status	
Force	Point blade upward, hold AUX button and twist the hilt
Switch blade color	Point blade downward, hold AUX button and twist the hilt
FOC	Hit the saber.
Drag	Hold the PWR button and hilt the blade
Melt	Hold the AUX button and thrust the blade horizontally forward
Enter standby mode	Twist the saber.

## ▶ OPERATING INSTRUCTIONS — PROFINE 2.2

	TURN ON/OFF
Battle Mode	Hold AUX and Swing while blade is ON to toggle mode ON/OFF.
Lgnite (ON)	Click PWR or Twist On while OFF
Muted Lgnition (ON)	Double click PWR while OFF
Retract (OFF)	Click PWR or TWIST HILT while ON(disabled during swinging)
	SOUND
Play Music Track	Hold and release PWR while OFF.hold and release PWR with blade pointing straight up while ON.
Silent mode	double click the PWR to mute the saber while OFF.
Adjust Volume	Hold the PWR/AUX meanwhile to enter/exit the volume adjustment mode after hearing a"di" sound, click PWR to turn up volume, click AUX to turn down volume while OFF.
Change Soundfonts	Previous Preset – click AUX while OFF (pointing down)Next Preset – click AUX while OFF (parallel or up)
	BLADE EFFECTS
Blast	Click AUX while ON.
Multi-Blast Mode	Hold and release AUX while ON to enter mode, Swing to initiate Blasts, click Aux to exit mode. Lock up, clash, stab, melt, drag or any button presses automatically exits mode.
Clash	Clash blade while ON. in Battle Mode clash and pull away quickly for "Clash" (requires BEGIN_LOCKUP and END_LOCKUP styles)
Lock up	hold AUX and clash while ON. in Battle Mode clash and hold steady to activate, pull away to disengage.
Drag	Hold AUX and stab down while ON. in Battle Mode stab down, pull away to disengage.
Melt	Hold PWR (or AUX) and thrust forward andclash while ON in Battle Mode thrust and clash to engage, pull away to disengage
Lightning Block	Hold PWR and click AUX while ON.
Force	Hold and release PWR while ON.
Stab	thrust forward and clash blade while ON–deactivated in.

## ▶ SECURITY INFORMATION

Before using and operating the product, in order to ensure optimal product performance and avoid dangerous or illegal situations, please read and follow all safety information.

### ① Operation and Safety

- Please fully charge before operation.
- Please use a 5V1A power adapter.
- Please keep small accessories safe and keep them out of reach of children to prevent them from accidentally swallowing.
- Please notice the anode and cathode of the battery.
- Please use this product within the temperature range of 0C~35C and store it in the range of -20C~+45C.
- Don't expose the battery to high temperatures or heat generating products, such as sunlight, heaters, microwaves, ovens, or water heaters. Overheating the battery may cause an explosion.
- Don't throw batteries into fire. It is prohibited to disassemble, drop, squeeze or modify batteries. Avoid foreign objects inserting, puncturing the battery, or immersing the battery in water or other liquids. Avoid external shocks and pressure on the battery. To prevent battery leakage, overheating, fire or explosion.
- Please dispose of batteries according to local regulations and don't dispose of them as household waste. Improper disposal of batteries may lead to battery explosions.
- When charging is complete or not charging, please disconnect the power adapter from the product and unplug the power adapter from the power socket.
- Don't use the power adapter in damp places (such as near sinks, bathtubs, or showers), and don't use wet hands to plug and unplug the power adapter.
- Using unauthorized or incompatible power sources, power adapters, or batteries may cause fire, explosion, or other hazards.
- [Warning] There is a risk of fire or explosion if the incorrect model of battery is replaced. For your personal safety and to ensure the normal operation of the product, we strongly recommend that you go to the Official store to replace the battery of this product.

### ② Warning

- This product is not suitable for children under 14 years old.

## ▶ FAQ

### ① The saber has no sound

Please confirm whether it is in mute mode, and you can adjust volume mode, or reinstall the battery.

### ② The blade is easy to loosen

Make sure that the screws that secure the blade are tightened. In addition, it is normal for the screws and the blade to loosen during the fight. You can change the fixed position of the screw and tighten the screw.

### ③ Saber cannot be turned on

Please charge the saber first to make sure it is fully charged. If it still can't be solved, please remove the battery and reinstall it (pay attention to the positive and negative poles), and make sure the battery are contact well.

## ▶ WARRANTY

The product has a one-year warranty period.

Warranty covers original products and accessories that have not been modified. Includes: light saber handle, electronic internal structure, and light saber blade.

## ▶ WARRANTY DISCLAIMER

Product malfunctions caused by self modification of electronic software programs or product hardware are not covered by the warranty.